



HI-CAPA CARNOTAURUS

Please read the [Instruction Manual] carefully and make full understanding of the details noted in the contents before use.


WARNING

- To avoid damaging the product, please release the gas from the magazines or cartridges while not operating.
- Sales and usage are restricted to 18-year-old people or older. Those below 18 years old are not allowed neither to purchase nor to operate alone.
- Never aim or shoot at people or animals. Please beware of childrens' mis-handling.
- Please read and fully understand all details listed in this instruction manual before using this air gun. You can download it from www.icsbb.com if you lose this instruction manual.

6mm BB



1 PART DESCRIPTION

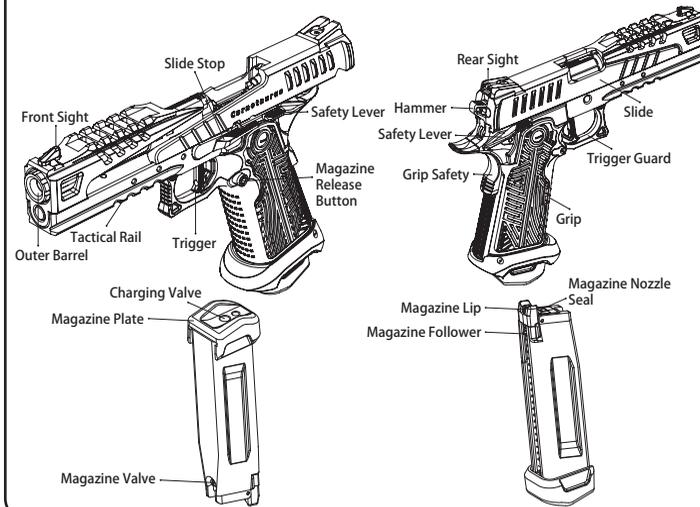

WARNING-ATTENTION



This model is featured with Gas-Blow-Back function. The slide will be pushed backward by the gas pressure strongly and rapidly while firing. To prevent injury, please keep your face and finger away from the slide.

- The pistol could be damaged when using at temperature of 40° C (104° F) or above.

2 SAFETY DEVICE



■ Safety ON

Engage the safety by cocking down the hammer then pressing up on the safety lever.
 ※ The trigger and slide can not be pulled when the safety is engaged.
 ※ Please press up the safety lever only when the hammer is cocked, or damage might be caused.



■ Safety OFF

Disengage the safety when you are going to fire.




■ The trigger cannot be pulled without holding the grip safety.




■ The trigger can be pulled when holding the grip safety firmly.

3 LOADING MAGAZINE

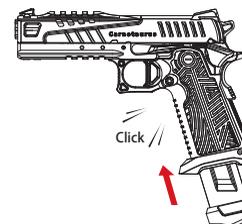

■ Load the magazine until it clicks into the locking position.
 ※ Do not insert the magazine by force.

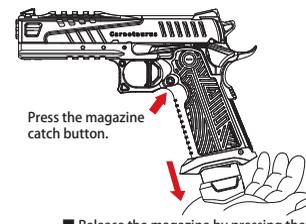


■ Release the magazine by pressing the magazine catch button.
 ※ Hold the magazine when releasing it from the pistol grip to prevent it from dropping.

WARNING-ATTENTION

- To prevent misfiring, keep your finger off the trigger and out of the trigger guard while loading the magazine.
- For safety reason, please remove the magazine while not operating.

4 CHARGING GAS

For the optimum product performance, please charge your magazine with 10-12kg airsoft use green gas. If you use green gas with non-recommended number of kg, it may cause damage or malfunction to the product.

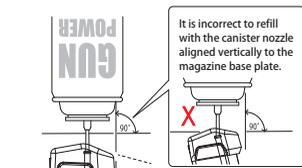


Please turn the magazine up side down to keep the injection hole side up, fill the gas only when the canister is verticalize to the injection hole.
 ※ The gas will not be filled into the magazine or will leak out if the canister is not verticalized to the injection hole.

WARNING-ATTENTION

- Please avoid to touch the injection hole. It might cause frostbites or low temperature burns if the gas adheres to the skin.
- To preserve the magazine
 △ Magazines are very delicate parts, dropping them may cause damage or abnormality.
 △ Please avoid foreign matter remains on the magazine lip and injection hole on the magazine, which may cause abnormality.
 △ If refilling is necessary, please avoid to proceed when the magazine is loaded. Please unload the magazine before proceed.
 △ Placing magazines in wet places or accumulated water may lead to abnormalities.

- △ Precautions while filling:
 ※ If you fill the magazine with a non-vertical way from up towards down, and caused the magazine is not completely filled, the gas starts to leak out, and refill the gas one more time as instructed.
 ※ Fill the gas until the gas starts to leak out. When the gas is fully filled, gas inside the gas canister and magazine are balance without refilling anymore. It is the normal condition that the gas starts to leak out because it is not able to keep filling. Please stop filling immediately.
 △ Please use your magazine under normal temperature!
 ※ If you operate in environment of 20° C or below, the gas pressure will drop and might cause abnormal functions. (The magazine will work normally again when temperature returns to normal temperature.)
 ※ If operate in environment of 40° C or above, the gas pressure will be too high and might cause abnormal functions. (The magazine will work normally again when temperature returns to normal temperature.)
 ※ If you fill the magazine with gas and fire dozens of shots even under normal temperature, the gas pressure will also drop and cause the gas temperature to drop. Prepare several spare magazines for exchange is recommended.

5 LOADING BBs

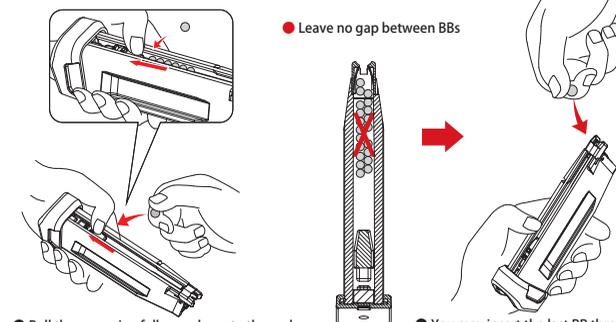

● Pull the magazine follower down to the end, insert BBs into the BB slot. (30 rounds MAX)


● You may insert the last BB through the magazine lip.
 ※ Do not attempt to insert more than 30 BBs into the magazine.

WARNING-ATTENTION

- Do not release the magazine follower abruptly while pressing the follower. Releasing the follower carelessly may damage the magazine lip.

6 Trigger Pull Adjustment

Please use a 2mm Allen wrench to adjust the trigger pull hex screw.
 ※ Please adjust according to personal habit.
 △ The trigger could be locked by fastening the hex screw to the end, please release the screw properly.

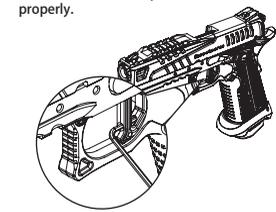

7 Loading

1. Insert the magazine.
2. Pull the slide to the end and hold (the hammer will be pressed down).
3. Release the slide (the slide is held at the back at the moment).
4. Press the slide catch downward, the slide will be pushed forward (a BB pellet will be loaded into the barrel).


WARNING-ATTENTION

- Keep your face and fingers away from the slide while the slide is operating.
- When the magazine is detached, the slide stop will not lock the slide spontaneously after your releasing the slide.
- When the pistol is loaded, loading repeatedly will makes the BBs load into the barrel repeatedly, which will lead to malfunction while firing and cause danger.
- When the hammer is pressed down, pulling the trigger will fire the bb. Please take extra notice.

8 SHOOTING


1. Switch the safety to FIRE.
2. Load the pistol according to step 7.
3. Pull the trigger to fire (a BB pellet will be fired and the slide will be pushed backward).

● The slide will be blown back and forth when firing.

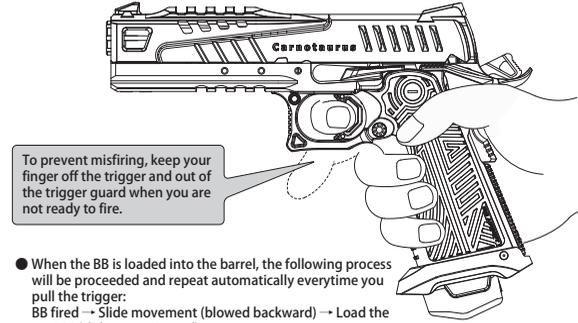

To prevent misfiring, keep your finger off the trigger and out of the trigger guard when you are not ready to fire.

- When the BB is loaded into the barrel, the following process will be proceeded and repeat automatically everytime you pull the trigger:
 BB fired → Slide movement (blowed backward) → Load the next BB (slide re-positioned)

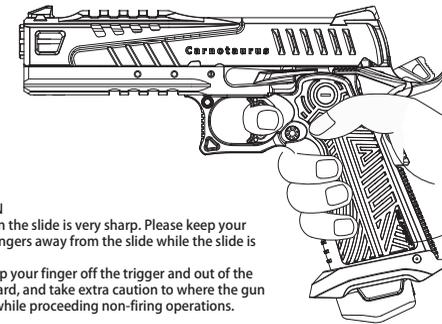

※ ATTENTION

- The rails on the slide is very sharp. Please keep your face and fingers away from the slide while the slide is operating.
- Please keep your finger off the trigger and out of the trigger guard, and take extra caution to where the gun is aiming while proceeding non-firing operations.

WARNING-ATTENTION

- Power Depression
 When the temperature inside the magazine is too low, the gas power will be depressed.
 △ The movement of the slide will be delayed.
 △ The slide catch will not bounced.
 △ The shooting range will not be far.

- Shooting posture
 △ Please do not operate the pistol up side down for optimum performance.

9 STORAGE

- ① Press the magazine catch button to release the magazine.
- ② Make sure the inner barrel is clear. If not, pull the slide backward, and turn the pistol up side down to remove (push the BB pellet out from the barrel by the clearing rod is also recommended).
- ③ Press the slide catch lever to release the slide.
- ④ Pull the trigger and fire several times towards safety directions, and make sure no BBs are left inside the barrel.

