




## WARNING



- ▲ When using airsoft guns eye protection is required.(goggles or mask)
- ▲ Never place your finger on the trigger until you are ready to fire the gun. Always put the gun in safe mode when not in use. Treat every gun as if it is loaded.
- ▲ Please keep away from children.
- ▲ BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in safe direction.
- ▲ Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.
- ▲ Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.
- ▲ Do not aim or shoot at humans, animals, buildings, or vehicles.
- ▲ Please use a firearm case or bag when transporting your airsoft gun.




## SR5 CO2 SERIES PARTS DESCRIPTION

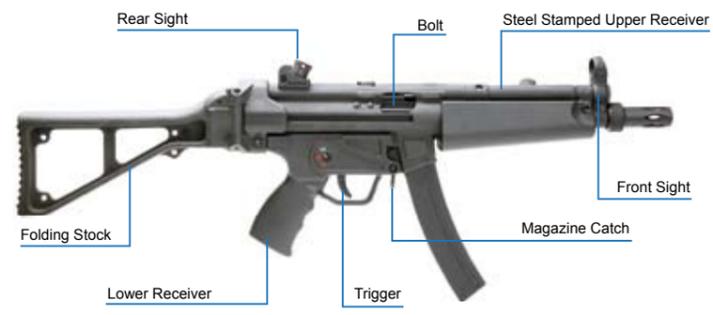

## TROUBLE SHOOTING



Remove the Magazine

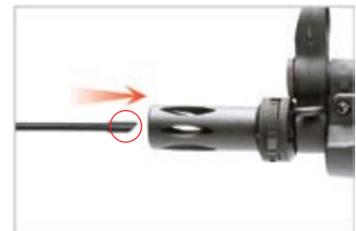

Release the hop-up. Use the correct end of the cleaning rod.

## Clearing Jammed BBs



Insert the cleaning rod into the barrel to remove the jammed BBs.



Use airsoft safe silicone to lubricate the hop-up chamber. Use silicone lubricant sparingly.

## INSTALLING THE 12G CO2 CARTRIDGE



1. Press the Magazine Catch.



2. Remove the Magazine



Lock the screw by a coin or screw driver.



Assemble the Magazine



Release the screw by a coin or screw driver.



Insert CO2 cartridge.

## LOADING BB BULLETS




Loading BBs with MP5 BB Loader



Insert the Magazine until you hear it click sound. The gun is now ready to fire.

## FIRE SELECTOR

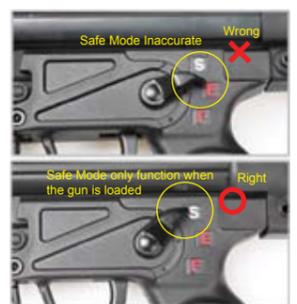

Safe mode



Semi mode



Auto mode

## LOADING



Pull the Charging Handle backward and release it. The gun is ready to fire.

## HOP-UP ADJUSTMENT



Remove the Pin



1. Pull the handguard downwards.  
2. Slide the handguard forward and remove from the gun.




Increase Hop-up Setting



Reduce Hop-up Setting

## WARNING

1. Always keep finger away from the trigger until you are ready to fire. Make sure the muzzle is pointing in a safe direction.
2. Keep the selector on safe mode until you are ready to shoot.

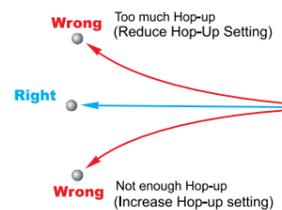




# SERIES SR5

# USER GUIDE

# FULL STEEL RECEIVER CO2 BLOW BACK

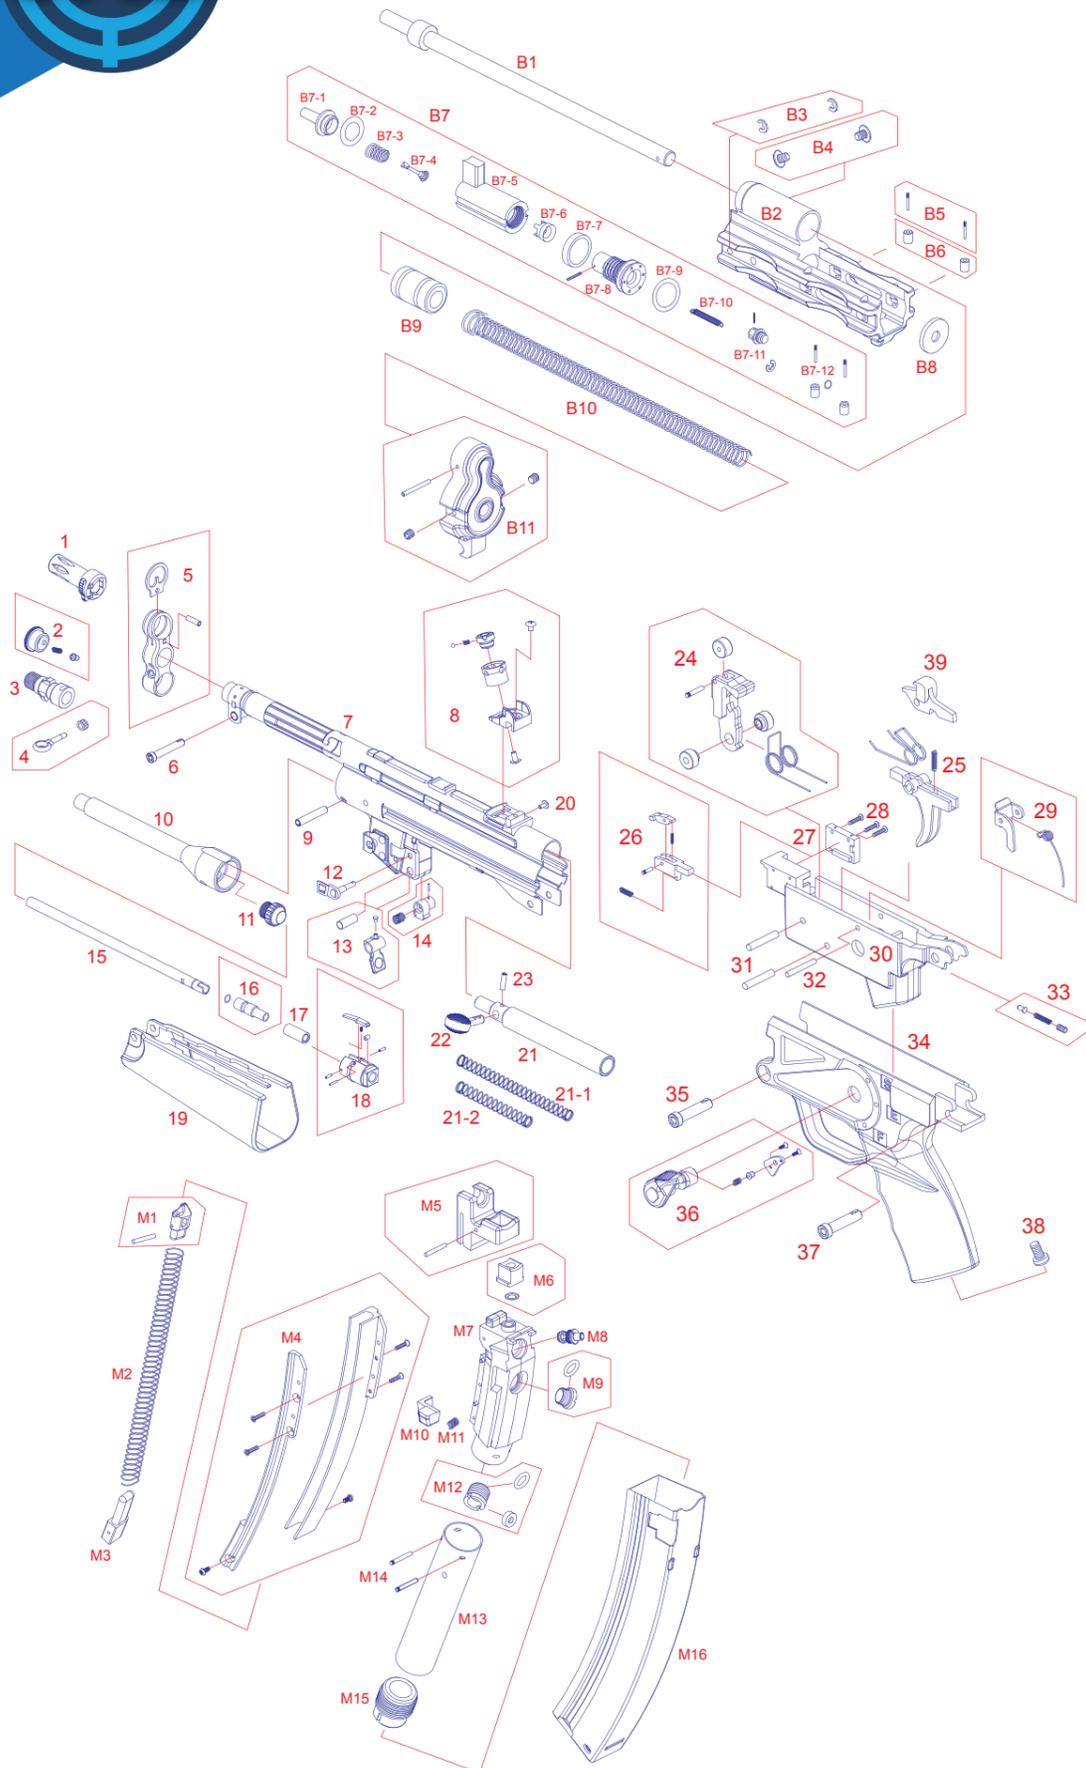

### Bolt Complete Set Parts List

B1	Guide Rod
B2	Bolt Base
B3	E type Buckle
B4	Screw
B5	Pin
B6	Wheel
B7	Air Nozzle Set
B7-1	NOZZLE
B7-2	O-RING
B7-3	SPRING
B7-4	Flute valve base
B7-5	Air nozzle base
B7-6	Valve base
B7-7	Piston O-ring
B7-8	Piston
B7-9	O-RING
B7-10	SPRING
B7-11	Piston cover with screw
B7-12	O-RING
B8	Piston Cap
B9	Steel Bearing
B10	Recoil Spring
B11	End Cap

### Upper Receiver Parts List

1	Q.D. Type Flash Hider
2	Cocking Tube Cap
3	Flash Hider
4	Front Swivel Set
5	Front Sight set
6	Q.D. Type Pin
7	Upper Receiver
8	Rear Sight Set
9	Pin
10	Outer Barrel
11	Hop-Up Adjustment
12	Magazine Catch
13	Magazine Release
14	Magazine Release Button
15	Inner Barrel
16	Hop-Up Mount
17	Hop-Up Bucking
18	Chamber Set
19	Handguard
20	Screw
21	Cocking Tube
21-1	Supporting Spring(A/SD)
21-2	Supporting Spring(K)
22	Cocking Lever
23	Pin

### Lower Receiver Parts List

24	Hammer Set
25	Trigger
26	Firing Pin Set
27	Firing Pin Box
28	Screw Set
29	Sear & Sear Spring
30	Trigger Pack
31	Pin
32	Trigger Pin
33	Latch Set
34	Lower Receiver
35	Q.D. Type Pin (Front)
36	Safety Lever
37	Q.D. Type Pin (Rear)
38	Screw
39	Semi/Auto Controller

### CO2 Magazine Parts List

M1	Magazine Bar
M2	Magazine Spring
M3	Spring Base
M4	BB Holder
M5	Magazine Lip
M6	Air Nozzle Rubber
M7	Valve Base
M8	Valve
M9	Tank Seal
M10	Magazine Catch
M11	Spring
M12	Cartridge Stab
M13	Cylinder
M14	Pin
M15	Cartridge Screw Cap
M16	Magazine Shell

